
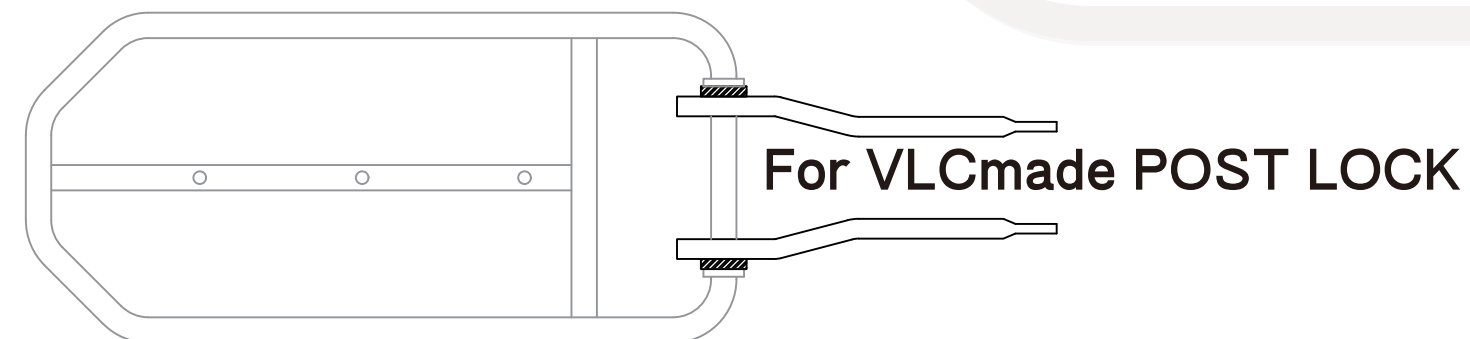
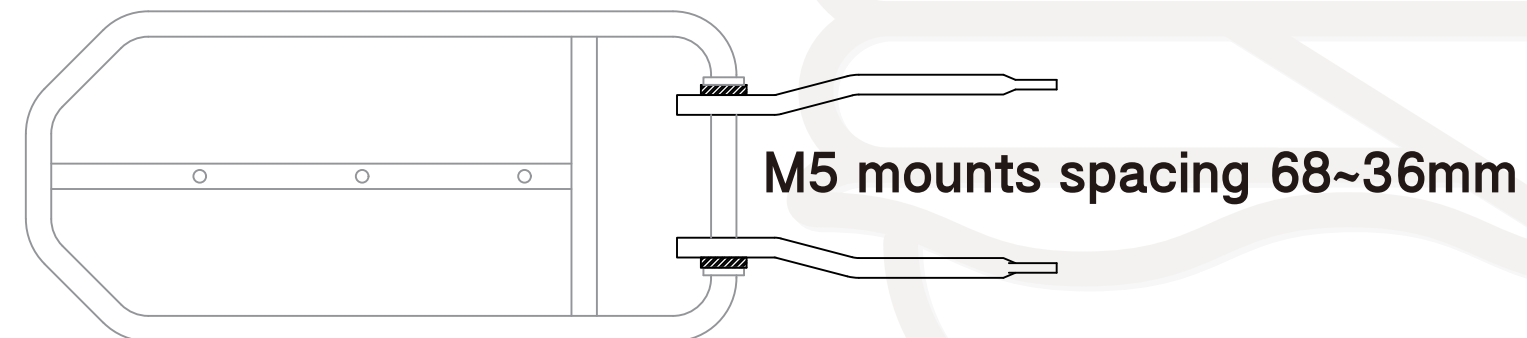
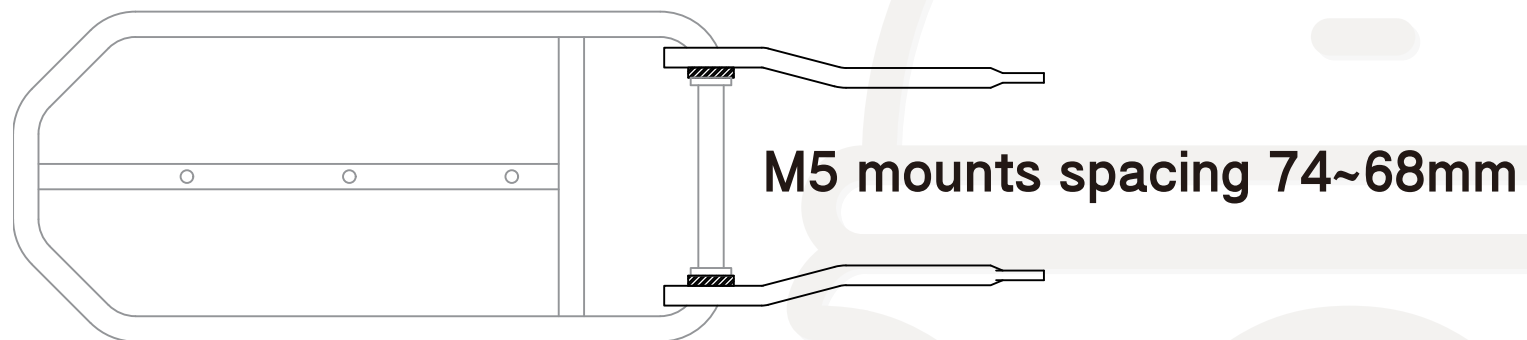


# ★ BEST SUB ★

## RACK FOOTLONG

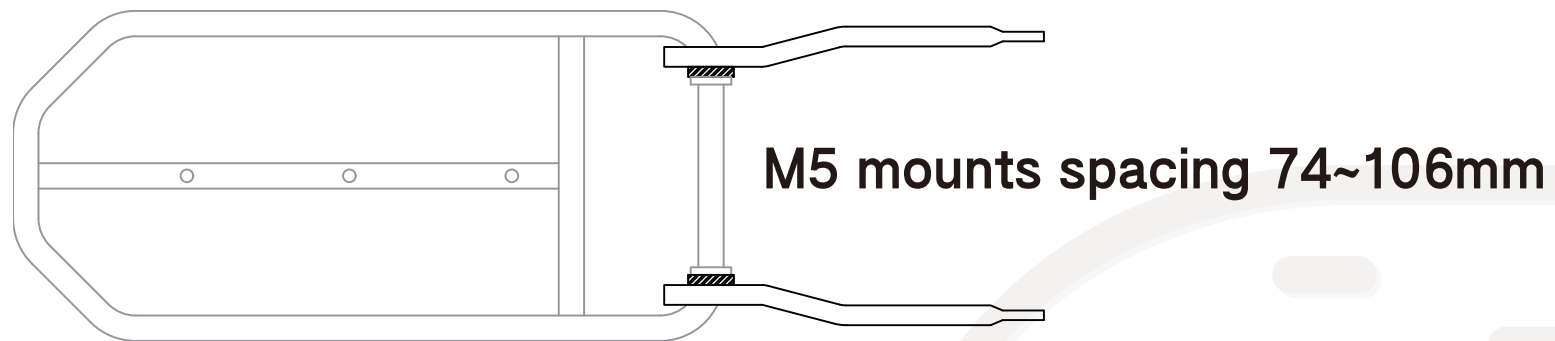

1. Measure the spacing of the M5 mounts on the seatstay of your frame. If there are no mounts on the seatstay, install the VLCmade Post Lock on the seatpost.
2. Follow the left diagram, use stainless strut holders, aluminum 5mm thick spacers, and M6 nuts to install the 220mm aluminum struts at the recommended position on the rack.
3. Use M5 bolts to install the rack and the 220mm aluminum strut on the frame, adding spacers as needed.
4. Adjust the rack to the ideal position and angle, and if necessary, trim any excess length from the aluminum struts.
5. Use stainless strut holders, aluminum 5mm thick spacers, and M6 nuts to install the 370mm aluminum struts at the rear end of the rack, adding stainless clamps and rubber spacers if needed.
6. If necessary, trim any excess length from the aluminum struts.
7. Tighten all screws and nuts.