


VLC made **PLANO FRONT RACK** Installation Instructions

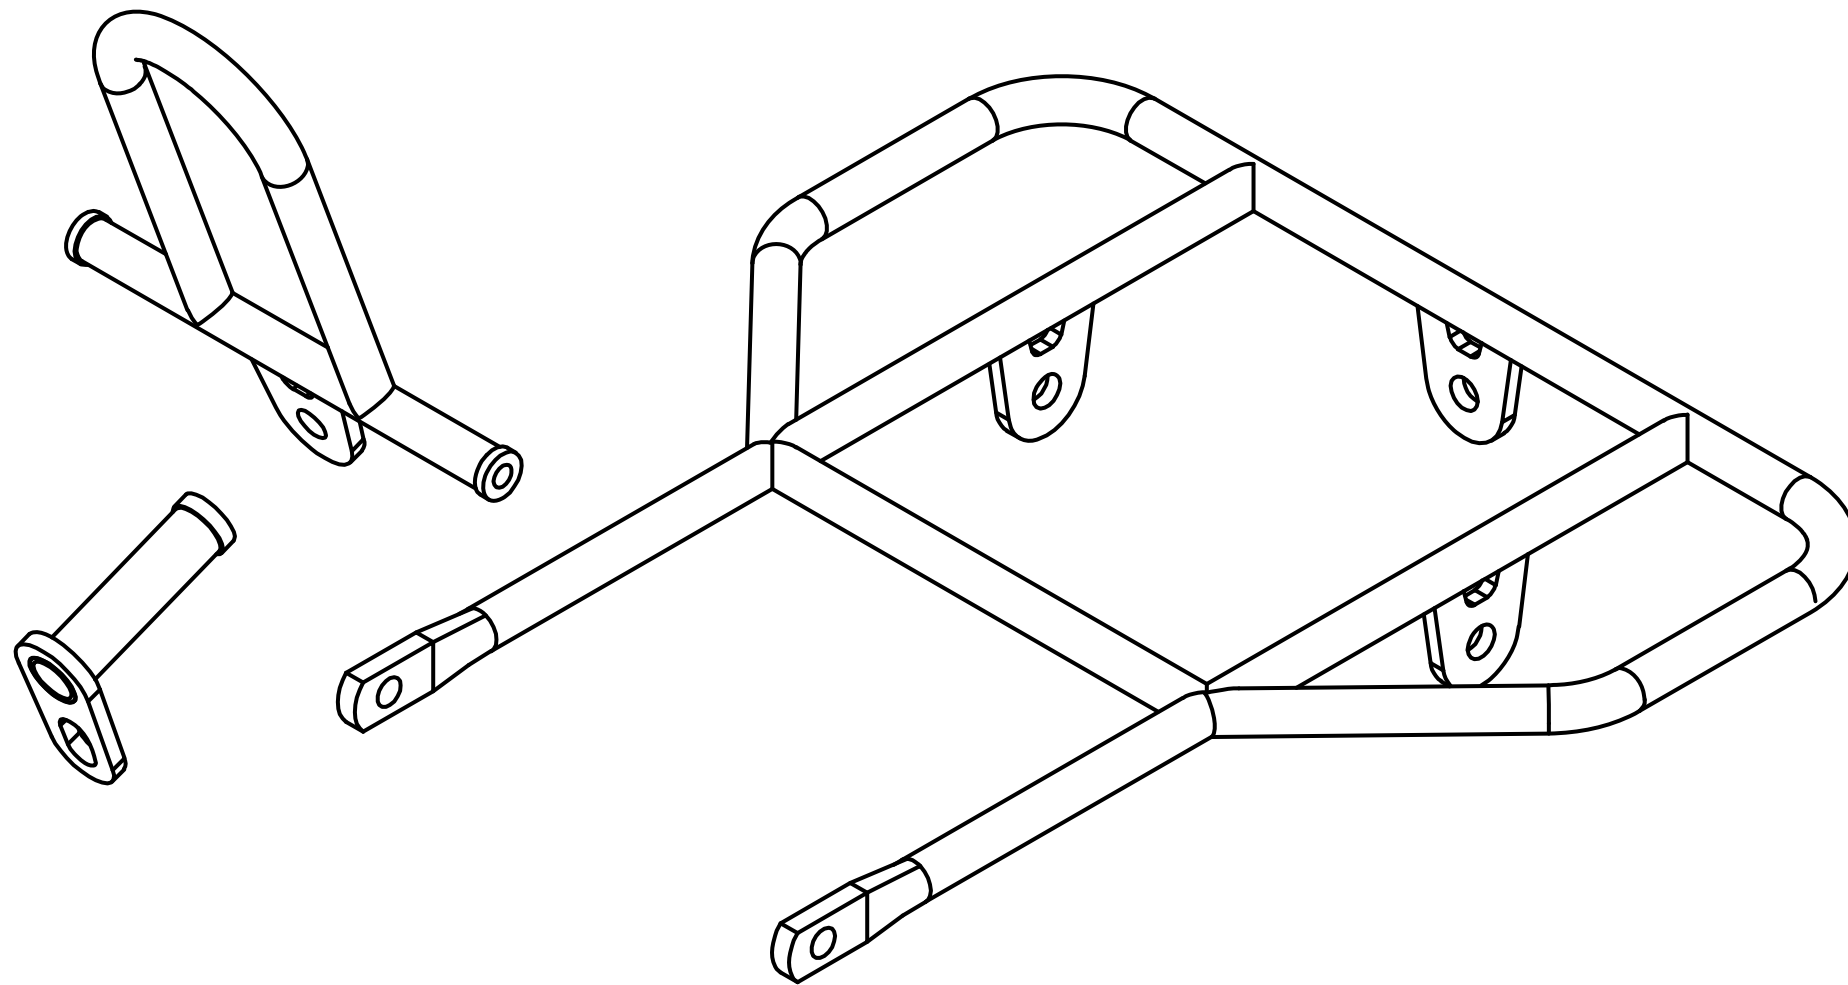

1. Install the Bracket

Attach the bracket to the **fork crown** using the **M6 × 50 mm bolt and M6 nut**. For more extension, use the **M6 × 80 mm bolt** with the supplied **5 mm or 15 mm spacers**. The bracket can be installed in either direction for a **higher or lower platform position**.

2. Install the Backstop

Attach the backstop to the platform using **M5 × 12 mm bolts × 2** and **spring washers × 2**.

Place the spring washers **between the backstop and platform**.

3. Install the Platform

Attach the platform and backstop assembly to the bracket using a **M6 x 15mm bolt** and a **M6 spring washer**. Adjust the platform position as needed. Add or remove spacers at the fork crown to adjust the extension.

4. Install the Struts

Attach the aluminum struts using the

M6 stainless steel strut holders, M6 lock nuts, and aluminum arc spacers.

Adjust the struts until the platform is **level and centered**.

5. Trim & Tighten

Cut off any unnecessary excess length from the aluminum struts. Check the rack position and clearance, then **fully tighten all bolts and nuts before riding**.